

Alert Level: **ADVISORY**

Software Version: N/A

Instrument: MMP

Subject: Handling the Removable Part of the IM Core

Summary: The inductive modem (IM) core is free to rotate for alignment purposes and is therefore slightly loose in the body.

Resolution: Use caution when handling this movable part to ensure that it remains in the body.

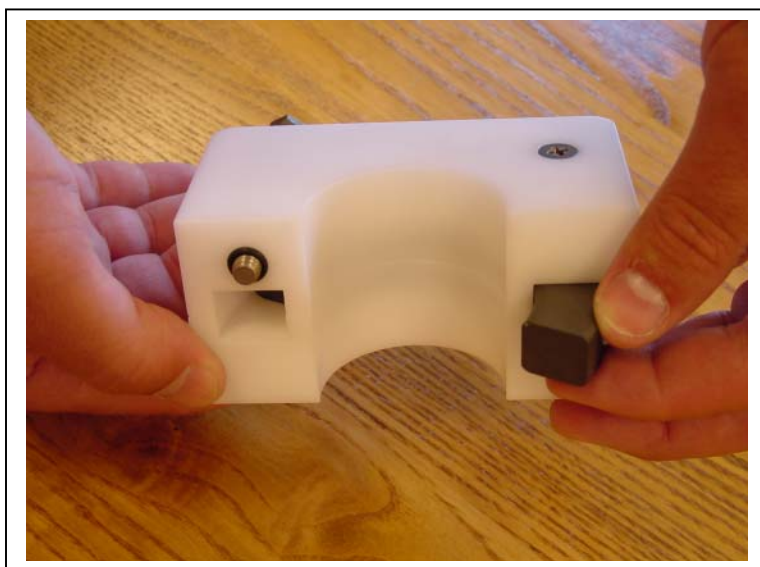


Figure 1: Handling the IM Core