

Alert Level: **IMPORTANT**

Software Version: N/A

Instrument: WTS-LV

Subject: 2-Pin Trigger Plug

Summary: Incorrect handling of the WTS-LV 2-pin trigger plug can damage internal connections and may cause intermittent trigger operation.

Solution: Removing and installing the trigger plug onto the WTS-LV bulkhead should be done by gripping the plug on the black rubber end, which is the thickest part of the plug (as shown in Figure 1) and not on the red end (as shown in Figure 2).

Push and pull the plug straight onto and off of the bulkhead without rocking, bending, or twisting the red end. Applying a small amount of DC-55 lubricant to the inside of the dummy plug will help the plug slide on and off more easily.



Figure 1: Grip the Plug on the Black Rubber End

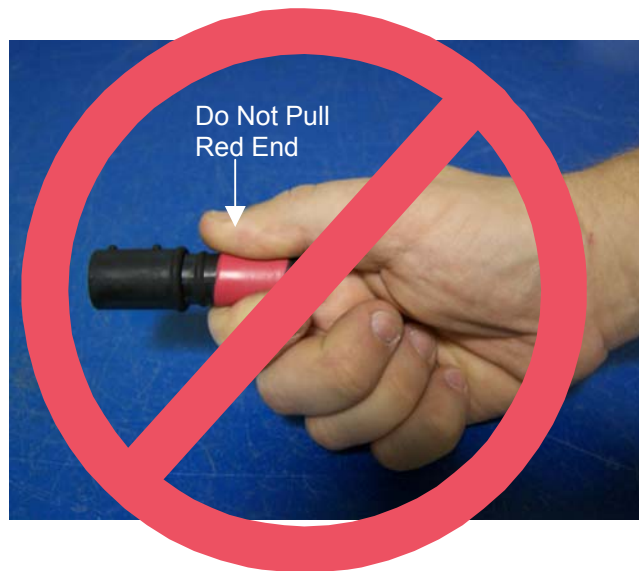


Figure 2: Do not Rock, Bend or Twist the Red End