

Alert Level: **IMPORTANT**


Software Version: N/A

Instrument: WTS-LV

Subject: Lubricating Threaded Pin on Cable Clamp T-Handle

**Summary:** Tightening and loosening the WTS-LV cable clamp without lubricating the T-nut can cause galling. If the T-nut galls, the clamp is unusable.

**Resolution:** To minimize risk of galling, apply a small amount of Metal-Free Anti-Seize lubricant (included in the WTS-LV toolkit) to the T-nut and bolt threads (as shown in Figure 1), and hand tighten the clamp (do not overtighten). Tools are not required to tighten the clamp on the wire.

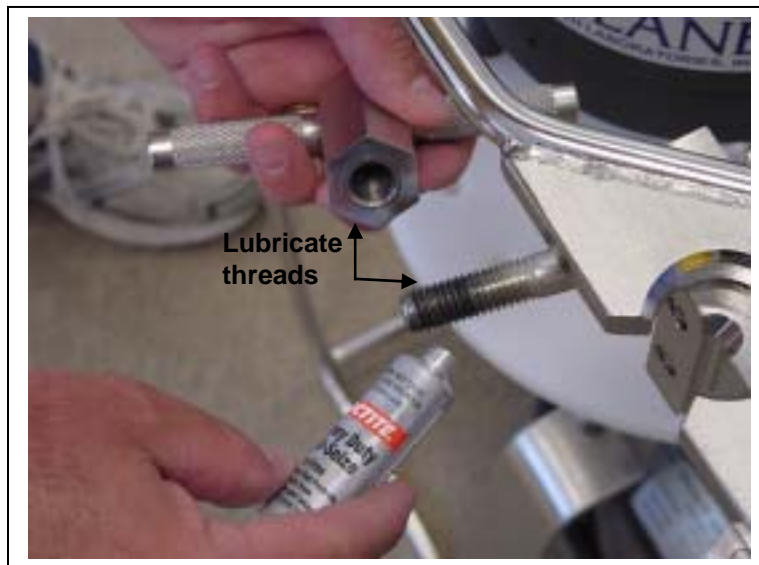

*Figure 1: Applying lubricant t-nut and bolt threads*